

MI_2514: Rear spacer - installation

 iVario Pro L / XL

 10 min.

 Standard

 28/11/2025

Topic

To ensure a minimum distance of 30 mm between the rear of the unit and the wall, units from production date 18 February 2025 are supplied with a rear spacer as standard.

The rear spacer can be retrofitted if necessary.

Note that the rear spacer must be removed when installing a wall mounting or the steam discharge wall connection kit.

Affected product/accessories

iVario Pro

 
- L
- XL

Required tool

- Standard

Required components

Component	Article number
Rear spacer	12.03.567S

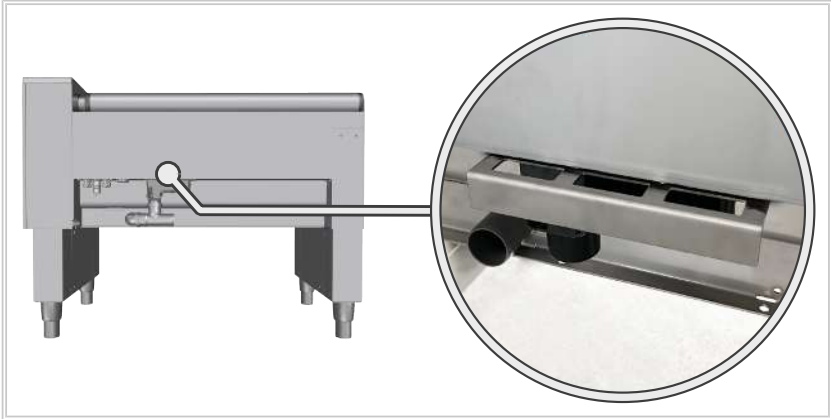

General information

NOTICE

Enter the installation of the component on the service level ("Component replacement" tab). This is an integral part of the maintenance history.

Target group

Installation, inspection, maintenance and repair work must only be carried out by trained technicians and technicians authorised by the manufacturer. In order to prevent accidents or damage, the manufacturer recommends that technicians attend training and safety instructions.

NOTICE! You can find more information in the installation manual.

Safety instructions

CAUTION

Sharp-edged panels

There is a risk of cuts when working on sheet metal parts.

- Wear protective gloves when working with sheet metal parts.

NOTICE

 
Observe regional and country-specific safety and testing regulations

The relevant regional, country-specific safety and testing regulations apply to all work on RATIONAL units. These regulations may vary by region and are country-specific and are therefore not listed separately in this document.


The technician is responsible for complying with these regulations.

Work steps - Installation of "rear spacer"

- ✓ The unit is accessible from the rear.
- 1. Loosen the two outer screws a few turns.

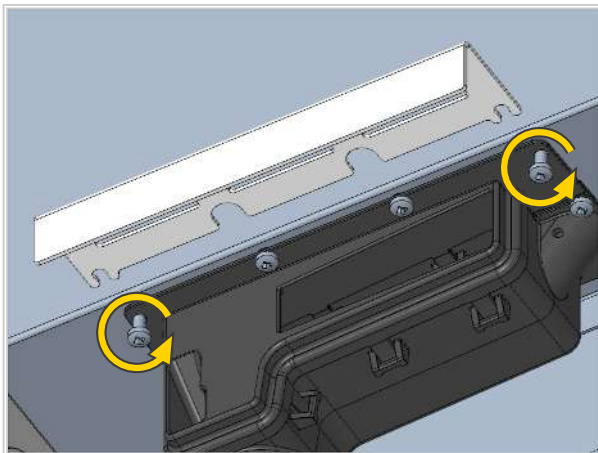

 - 2. Install the rear spacer as shown.
- 3. Tighten the two outer screws again.

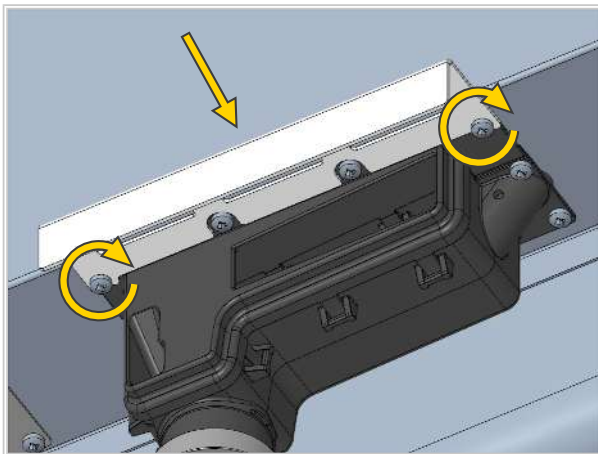

>> The installation is complete