

MI_2515: Rear spacer - installation

 iVario 2-XS / Pro 2-S

 10 min.

 Standard

 23/01/2026

Subject

To ensure a minimum distance of 30 mm between the rear of the unit and the wall, units from production date 30 April 2025 are supplied with a rear spacer as standard.

The rear spacer can be retrofitted if necessary.

Affected product/accessory


- iVario
- 2-XS
- iVario Pro
- 2-S

Required tool

- Standard

Required components

Component	Article number
Rear spacer	12.03.550S

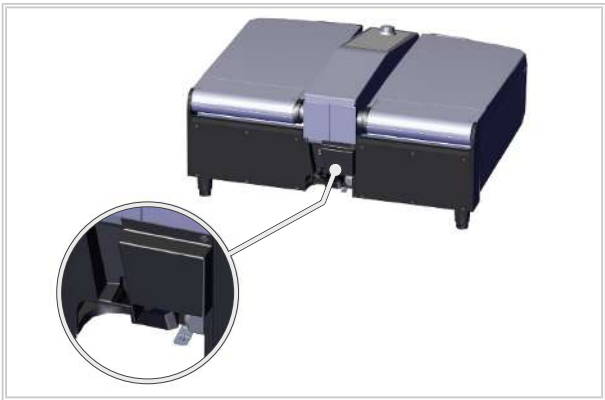

General information

NOTICE

Enter the installation of the component on the service level ("Component replacement" tab). This is an integral part of the maintenance history.

Target group

Installation, inspection, maintenance and repair work must only be carried out by trained technicians and technicians authorised by the manufacturer. In order to prevent accidents or damage, the manufacturer recommends that technicians attend training and safety instructions.

NOTICE! You can find more information in the installation manual.

Safety instructions

CAUTION

Sharp-edged panels

There is a risk of cuts when working on sheet metal parts.

- Wear protective gloves when working with sheet metal parts.

NOTICE

Observe regional and country-specific safety and testing regulations

The relevant regional, country-specific safety and testing regulations apply to all work on RATIONAL units. These regulations may vary by region and are country-specific and are therefore not listed separately in this document.

The technician is responsible for complying with these regulations.


Revision Log

Changes from previous version of this manual:

- Chapter topic: Sentence with "remove rear spacer" has been omitted.

Work steps - Installation of "rear spacer"


- ✓ The unit is accessible from the rear.
- 1. If present, remove the old version of the cover (not visible here).
- 2. To do this, remove the 2 screws at the circled points.

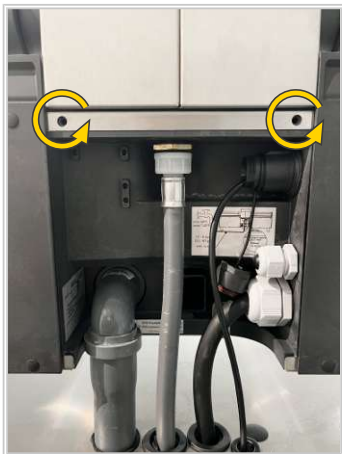

- 3. Pull the hose slightly upwards.



4. Install the rear spacer (1) as shown.
5. Position the hose (2) so that it rests on the left against the edge (3).
 - **NOTE:** Ensure that the hose is routed correctly to avoid excessive kinking. Position it as vertically downwards as possible, not to the right of the chimney.

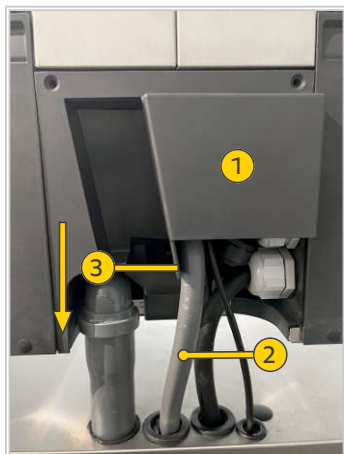

6. Make sure that the tab is positioned correctly on the left.



7. Insert the 2 screws provided.
8. Tighten the 2 screws to **4 Nm**.



9. Place the 2 cover caps on the screw heads.



>> The installation of the **rear spacer** is complete.