

MI_2160: Door handle tabletop unit - replacement

 iCombi Pro / iCombi Classic

 5 min.

 Standard

 17/08/2026

Topic

These Modification Instructions describe how to remove and install the door handle for tabletop units.

Affected units

iCombi Pro and iCombi Classic

- 6-2/3
- 6-1/1
- 6-2/1
- 10-1/1
- 10-2/1

Required tool

- Standard

Required components

Component	Article number
Door handle RATIONAL iCombi Pro	24.04.083P
Door handle RATIONAL iCombi Classic	24.04.084P

General information

Information

Enter the component's installation at the service level (*Component Replacement* tab). This is an integral part of the maintenance history.

Target group

Installation, inspection, maintenance and repair work must only be carried out by trained technicians and technicians authorised by the manufacturer. In order to prevent accidents or damage, the manufacturer recommends that technicians attend training and safety instructions.

Information

For more information, see the installation manual.

Safety instructions

CAUTION

Sharp edges on the housing

Risk of cuts on the housing when working in the unit.

- Wear protective gloves.


Information

Observe regional and country-specific safety and testing regulations


The relevant regional, country-specific safety and testing regulations apply to all work on RATIONAL units. These regulations may vary by region and are country-specific and are therefore not listed separately in this document.

The technician is responsible for complying with these regulations.

Removal - door handle for tabletop units

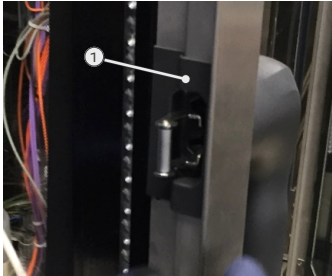


- ✓ The cooking cabinet door is open.
- 1. Slide the plastic cover of the door lock (1) upwards to unlock the plastic cover.
- 2. Remove the plastic cover (1).

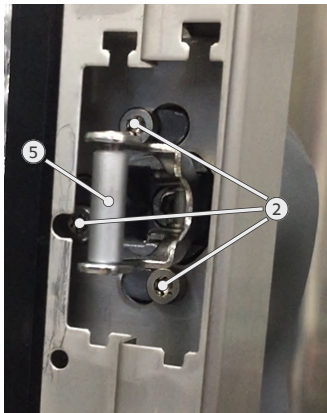

- 3. Remove the 3 screws (2) on the lock with spring clip (5).

i Information
This work step is only necessary if replacing the lock with spring clip (5).

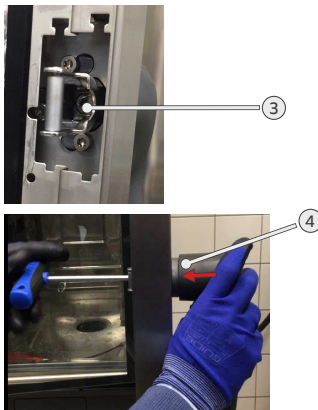



- 4. Remove the screws of the door handle (3) using a 5 mm Allen key.

i Information
When loosening the screw, press the door handle (4) towards the cabinet door to release the lock and hold the spring mechanism in position.

- 5. Pull the door handle (4) off the door lock.

>> The door handle is removed.


Installation - door handle for tabletop units

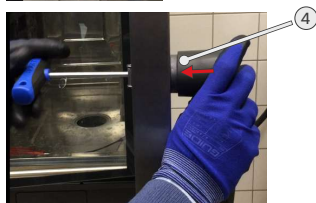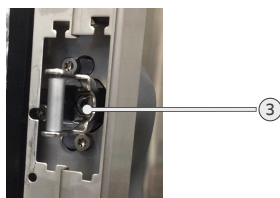

1. The cooking cabinet door is open.
2. The door handle is removed.
3. Place the door handle (4) on the door lock.
4. Tighten the door handle screw (3) to 7.5 Nm.

i Information


When tightening the screw, press the door handle (4) towards the cabinet door to release the lock and hold the spring mechanism in position.

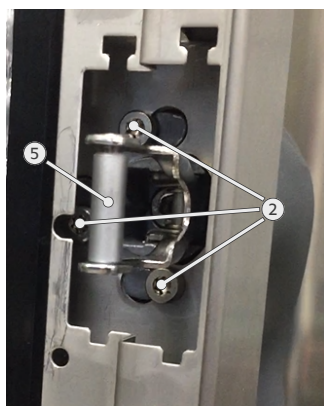

5. Tighten all 3 screws (2).

i Information

This work step is only necessary if replacing the lock with spring clip (5).

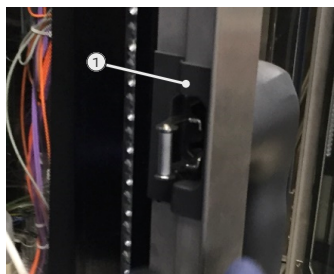

6. Insert the plastic cover of the door lock (1) on the inside of the door.

>> The door handle is installed.