

MI_2302: Rear panelling with steam guide L/XL

 iVario Pro L/XL

 30 min.

 Standard

 03/02/2023

Topic

This information provides a solution for improving the steam extraction on units placed against a wall.

Affected product/accessories



Required tool

Standard

Required components

	iVario Pro L	iVario Pro L P	iVario Pro XL	iVario Pro XL P
Article number	87.01.964S	87.01.964S	87.01.959S	87.01.959S

General information

NOTICE

Enter the installation of the component on the service level ("Component replacement" tab). This is an integral part of the maintenance history.

Target group

- This document is intended for skilled technicians, who have been certified by the manufacturer after attending training and safety instructions.
- Installation, inspection, maintenance, and repair work must only be carried out by trained technicians.
- It is recommended that only technicians authorised by the manufacturer perform inspection, maintenance and repair work.
- The unit may not be used, cleaned, or maintained by children. The unit may not be used for play. This is prohibited even under supervision.
- The unit may not be used, cleaned, or maintained by people with limited physical, sensory, or mental capacity or those without the necessary experience or knowledge, unless such people are supervised by a person who is responsible for their safety and who has been informed of the hazards of the unit.
- In order to prevent accidents or damage, the manufacturer recommends that technicians attend training and safety instructions.

Installation position



Safety instructions

DANGER

High voltages when connecting to the mains power

Danger to life due to high voltage.

- Disconnect from the power supply.
- Make sure the unit is disconnected from the power.


CAUTION

Sharp edges on the housing


Risk of cuts on the housing when working in the electrical compartment.
Wear protective gloves.

Work steps


1. Remove the five screws securing the control box to the chassis.
2. Mount the stack partition on the control box using the screws previously removed.

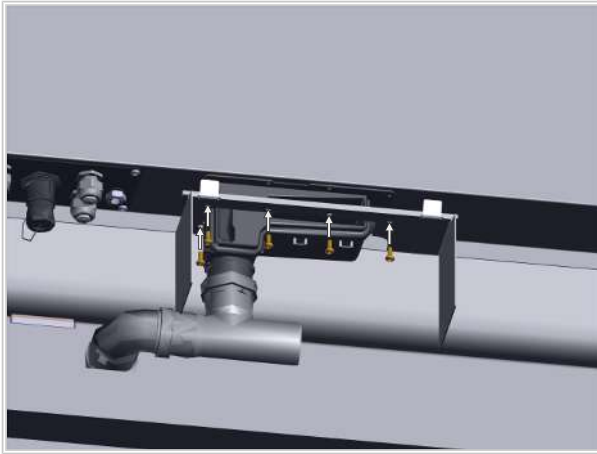


3. Remove the 3 cover caps on the left rear side of the unit.

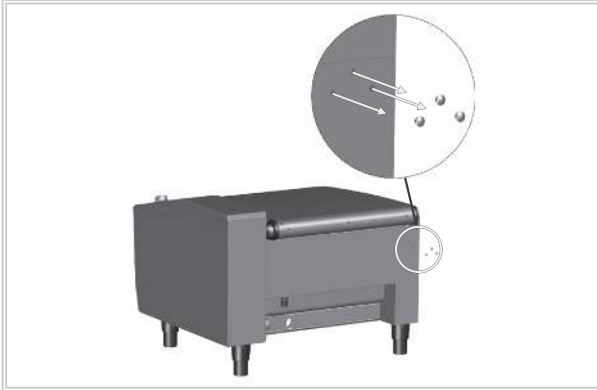

4. Slide the covering panel onto the stack partition (1) from above and hook the covering panel onto the rear panel of the unit (2). Tighten the M10x40 hexagon head screw on the rear left side of the unit (3).

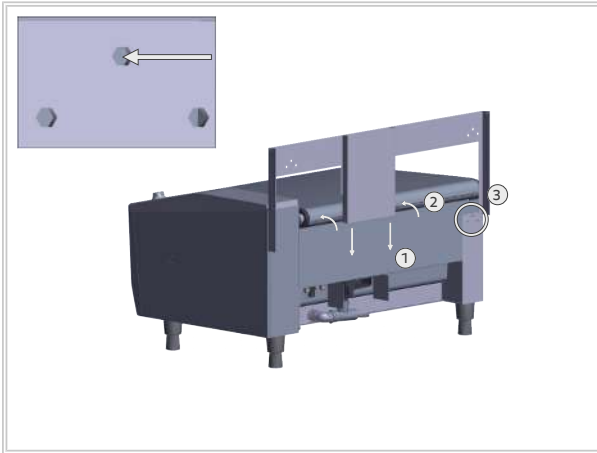

5. Place the cover on the panelling (1) and screw it in place on the left and right side (2).

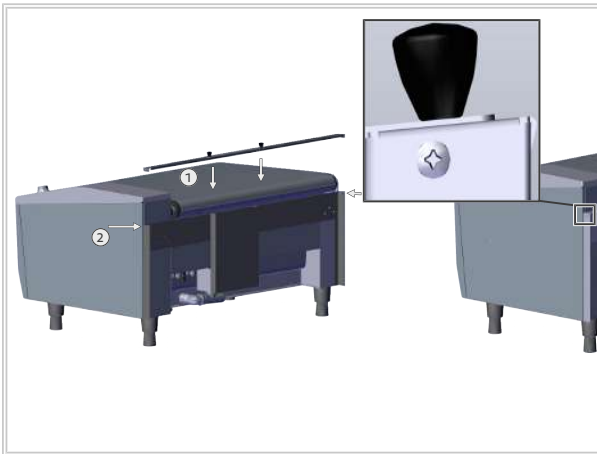

6. Position the unit in the intended position.
7. Seal the back of the electrical compartment and the area between wall and covering panel with silicone.
 - > The covering panel has been attached to the unit.

