

# MI\_2415    Handle mount - removal and installation



iHexagon



10 min.



Standard



24/11/2025

## Topic

The information describes the removal and installation of the handle mount.

## Affected product/accessories

iHexagon

- 6-1/1

## Required tool

- Standard

## Required components

The following components are required for removal and installation:

| Component:        | Item number: |
|-------------------|--------------|
| Door handle mount | 87.02.017S   |

## General information


### NOTICE

**Enter the installation of the component on the service level ("Component replacement" tab). This is an integral part of the maintenance history.**

## Target group

- This document is intended for skilled technicians, who have been certified by the manufacturer after attending training and safety instructions.
- Installation, inspection, maintenance, and repair work must only be carried out by trained technicians.
- It is recommended that only technicians authorised by the manufacturer perform inspection, maintenance and repair work.
- The unit may not be used, cleaned, or maintained by children. The unit may not be used for play. This is prohibited even under supervision.
- The unit may not be used, cleaned, or maintained by people with limited physical, sensory, or mental capacity or those without the necessary experience or knowledge, unless such people are supervised by a person who is responsible for their safety and who has been informed of the hazards of the unit.
- In order to prevent accidents or damage, the manufacturer recommends that technicians attend training and safety instructions.

### Installation position

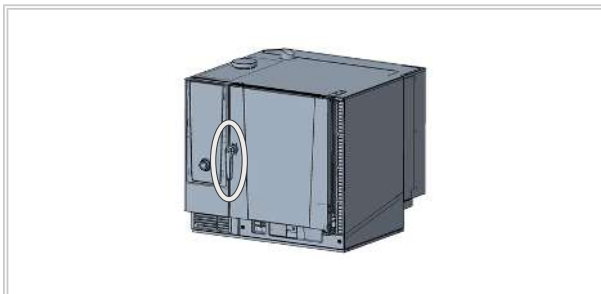

### Safety instructions

#### CAUTION

##### **Sharp edges on the housing**

Risk of cuts on the housing when working in the electrical compartment.  
Wear protective gloves.

#### WARNING

##### **Risk of chemical burns due to cleaning chemicals**

There is a risk of chemical burns from conscious and unconscious contact with cleaning chemicals.

- During installation and maintenance, wear tight-fitting safety glasses and chemical protective gloves that will allow you to handle cleaning products safely.

#### NOTICE

##### **Observe regional and country-specific safety and testing regulations**

The relevant regional, country-specific safety and testing regulations apply to all work on RATIONAL units. These regulations may vary by region and are country-specific and are therefore not listed separately in this document.

The technician is responsible for complying with these regulations.

**Work steps - removal of the handle mount**

1. Open the glass pane package at the retaining clips.



2. Loosen screw cover (1).




3. Loosen the screw (2).  
Use the TX20 attachment for the screw driver.



4. Remove the door handle (3).

5. Loosen the three screws (4).  
Use the TX20 attachment for the screw driver.

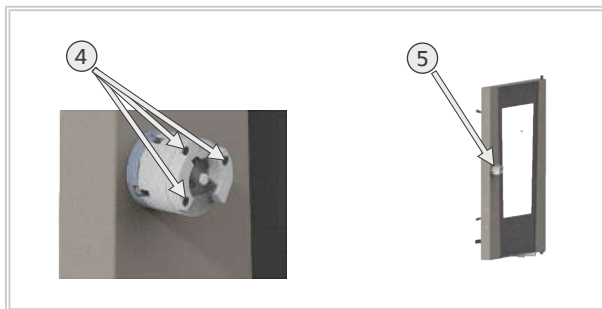

6. Remove the handle mount (5).  
>> The removal is complete.

### **Work steps - installation of the handle mount**

1. To install, proceed in reverse order.
- >> The installation is complete.