

**MI\_2008:**

**Installing and removing the**

**drain pump (M15) -**

**Einbau und Ausbau der Drain**

**Pumpe (M15)**

Modification Instructions –

Umbauanleitung

Documents currently only available in English and German



<b>English .....</b>	<b>3</b>
<b>Deutsch.....</b>	<b>9</b>

## MI\_2008: Installing and removing the drain pump (M15)

iCombi Pro & iCombi  
Classic

15 min



Standard



06/11/2020

## Safety instructions

**DANGER****High voltages when connecting to the mains power**

Danger to life due to high voltage.

- Disconnect from the power supply.
- Make sure the unit is disconnected from the power.

**CAUTION****Sharp edges on the housing**

Risk of cuts on the housing when working in the electrical compartment.

Wear protective gloves.

## Required component

Component:	Article number:
Pump motor drain	56.01.017P

## General information


It is necessary to remove the base cladding.



## Work steps - removing the drain pump (M15)

- a. Control the drain pump with the function test to pump residual water out of the drain box.


b. Unplug the electrical supply from the drain pump.

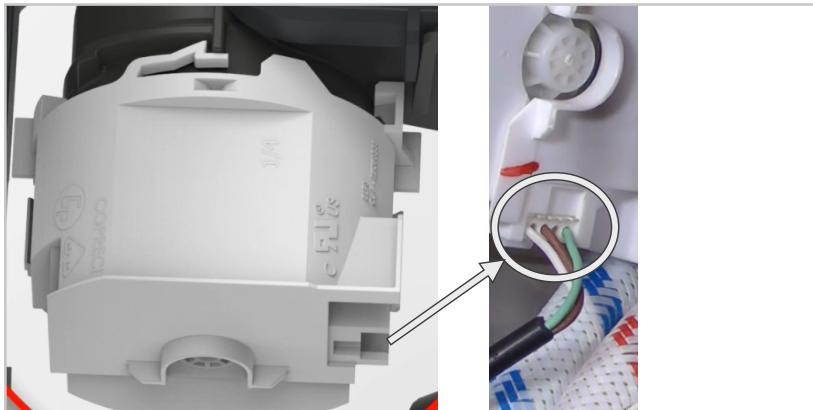

- a. Then unlock the drain pump at the following point and turn it out of the bayonet lock:

Step 1: Squeeze the clamp together to unlock it

Step 2: Turn the entire pump cover clockwise and unlock

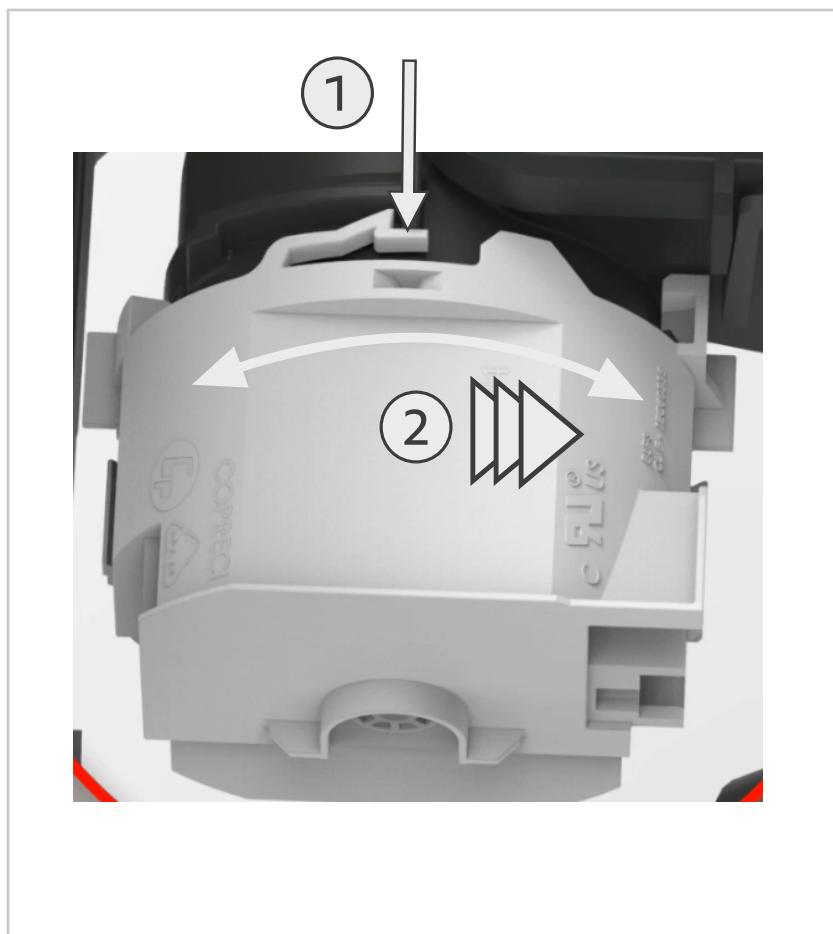

#### Work steps - installing the drain pump (M15)

- a. Proceed in reverse order when reinstalling.

**The unit is ready for use again.**







## MI\_2008: Einbau und Ausbau der Drain Pumpe (M15)

iCombi Pro & iCombi  
Classic

15 min



Standard



06.11.2020

## Sicherheitshinweise

**⚠ GEFAHR****Hohe Spannungen bei Anschluss an das Stromnetz**

Lebensgefahr bei Arbeiten mit Hochspannung.

- Trennen Sie die Verbindung zur Energieversorgung.
- Stellen Sie sicher, dass das Gerät spannungslos ist.

**⚠ VORSICHT****Scharfe Kanten am Gehäuse**

Schnittgefahr am Gehäuse bei Arbeiten im Elektroräum.

Tragen Sie Schutzhandschuhe.

## Benötigtes Bauteil

Bauteil:	Artikelnummer:
Pumpenmotor Drain	56.01.017P

## Allgemeine Informationen


Es ist notwendig die Sockelverkleidung zu entfernen.




## Arbeitsschritte – Ausbau der Drain Pumpe (M15)

- a. Über den Funktionstest die Drain-Pumpe ansteuern um Restwasser aus der Drain Box zu pumpen.

b. Die Zuleitung von der Drain Pumpe abstecken.

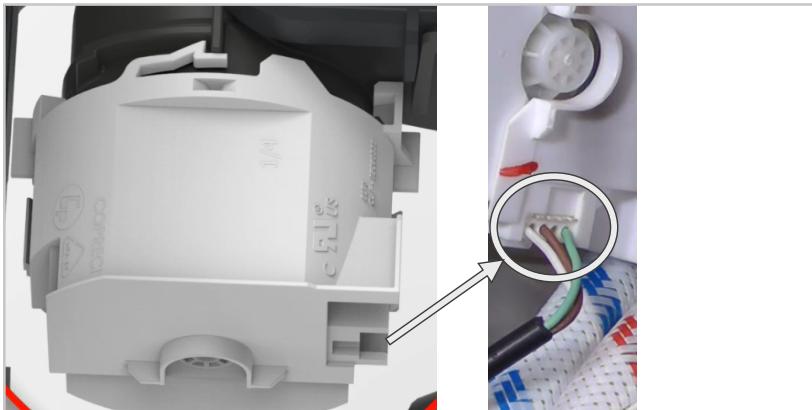

- a. Anschließend die Drain Pumpe an folgender Stelle entriegeln und aus dem Bajonettschluss drehen:  
Schritt 1: Klammer zusammendrücken, um Klammer zu entriegeln  
Schritt 2: gesamte Pumpenverkleidung in Uhrzeigerrichtung drehen und entriegeln

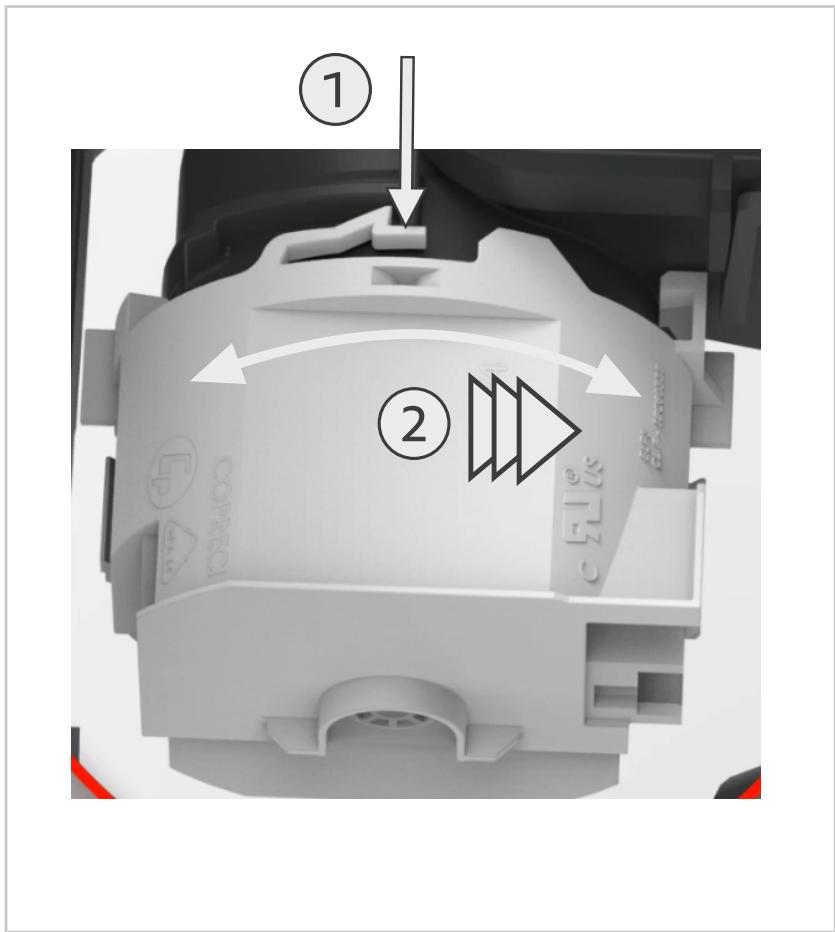

#### Arbeitsschritte – Einbau der Drain Pumpe (M15)

- a. Gehen Sie für den Wiedereinbau in umgekehrter Reihenfolge vor.  
**Das Gerät ist wieder einsatzbereit.**

