

TI_2324: Adaptation of roll guide for iCombi Pro

 iCombi Pro 6-1/1 - 10-2/1

 ---

 ---

 30/10/2023

Topics

Due to the new option “Chemical storage system: iCareSystem AutoDose” the housing of the roll guide has been adapted. When servicing new devices that include the option “Chemical storage system: iCareSystem AutoDose” only new roll guides must be mounted. Only the new roll guides have a fixture for the cooling fan holder.

Affected product/accessories

iCombi Pro Electric / Gas

- 6-1/1
- 6-2/1
- 10-1/1
- 10-2/1

Affected components

The service part number for the roll guide remains unchanged.

Leaking roll guide			New roll guide	
Component	Article number		Component	Article number
Hand shower roll guide	52.00.096P	=>	Hand shower roll guide	52.00.096P

General information


Old roll guide

- Graphical representation of an old roll guide



New roll guide

- Graphical representation of a new roll guide

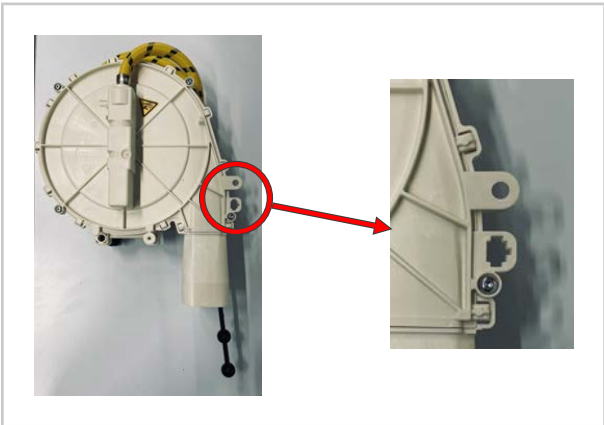

NOTE:

No further action is required.